




RX-1-02

E-Z-GO RXV Windshield Hinged Snap-On

1-800-752-6799

www.StrechPlastics.com

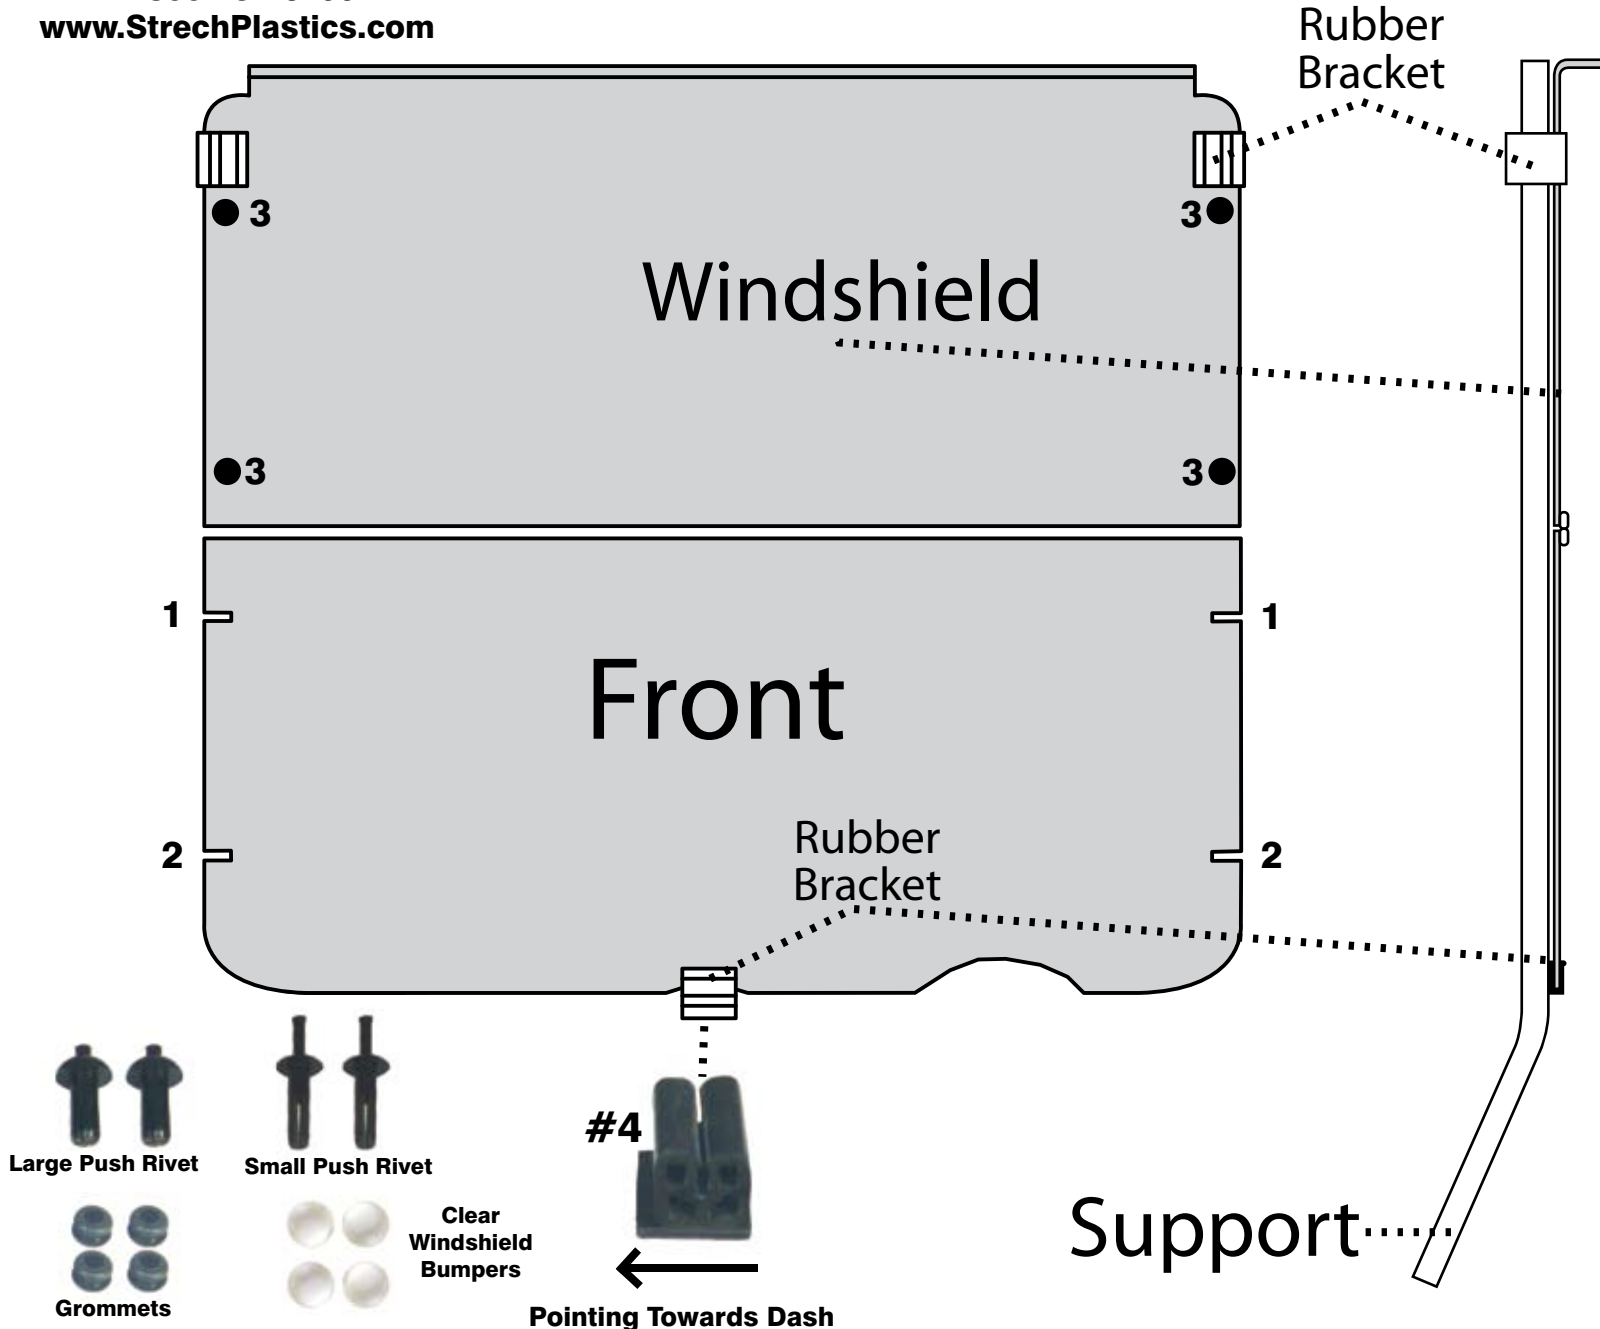

Step1: Place the 4 grommets into slots 1 & 2 on the windshield. Peel and stick the 4 clear windshield bumpers into positions 3 on the back of the windshield as shown.

Step2: Place the #4 Rubber bracket onto the bottom center notch of the windshield. Peel off the tape on the bottom of the bracket. Line up the windshield #2 slots to the holes in the bottom of the supports then stick the Glue on Rubber Bracket into place on the cowl against the dash trim.

Step3: Push the large rivets into the grommets in the #2 slots and tap them to lock them into place.

Step4: Using a 1/4" drill bit using the grommets in the #1 slots as a guide and drill the upper support holes. Drill the front side of the supports only. Do not drill through the back side. Push the small rivets into the grommets in the #1 slots and tap them to lock them into place.

Addendum:

If your hardware kit contains a bolt instead of a large rivet. In step 2 you must drill the bottom hole of the support on both sides completely through with a 1/4" drill bit and bolt together using the same grommet in slots #2 with a bolt and washers.

